

Advance Concrete 2011 SP1 Hotfix




www.graitec.com

Issues fixed with the Hotfix "DWG Export" for Advance Concrete 2011 SP1

Export to DWG

- [31756] Project settings files (ACPRJ) saved by Advance Concrete 2011 can be successfully loaded.
- [31704 - support 5564] Export to DWG: The error message preventing the export to DWG does not appear.
- [31767 - support 5566] Export to DWG: The "display layer manager" settings are taken into account during export to DWG format.
- [31783 - support 5567] The export with layer standard did not work with a specific drawing. This has been fixed.
- [31735] Export to DWG: A new option in the User preference allows controlling the dimension explode.

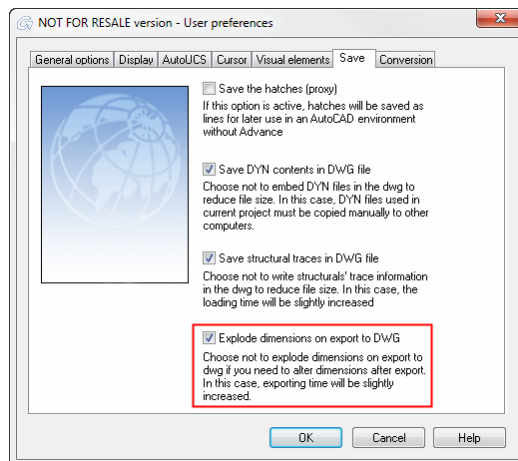

- [31801] Associative dimension: "Explode" does not move the text outside the dimension.
- [31808] Export to DWG exports complete title blocks containing entities on layers other than "0".
- [31821] Level dimension text keeps the layer assigned by layer standard.
- [31832 and 31841] All pertinent layers are now turned on in the exported DWG.

Others

- [31741] The horizontal/vertical dimensions in bending details has been corrected.
- [31792 - derived 31818] Segment lengths in bending details are correctly displayed.
- [31785] Errors preventing the formation of 3D models for U bars with hooks have been fixed.
- [31797] Reinforcement sections (details) can be deleted in the reinforcement drawing with 3D power enabled.